

IVECO Daily 3.0 with Quad-Leaf

SB24010065 // New Routing



B

Iveco Daily 3.0 1FC Cross
Spring (Quad-Leaf)



OLIVA TORRAS
MOUNT & DRIVE KITS

IVECO Daily 3.0 with Quad-Leaf

SB24010065 // New Routing



1



* CUT ONLY IF IT IS NECESSARY



MAKE A Ø8,5 HOLE IN THE BRACKET TO INSTALL M8 BOLT

1280022515

FLAT WASHER Ø6 DIN-125
NUT M6 DIN-934


1149000040*

HEXAGONAL BOLT
M6x20 DIN-933
FLAT WASHER Ø6
DIN-125


HEXAGONAL BOLT
M8x40 DIN-933
SPRING WASHER Ø8
DIN-2093A

IVECO Daily 3.0 with Quad-Leaf

SB24010065 // New Routing

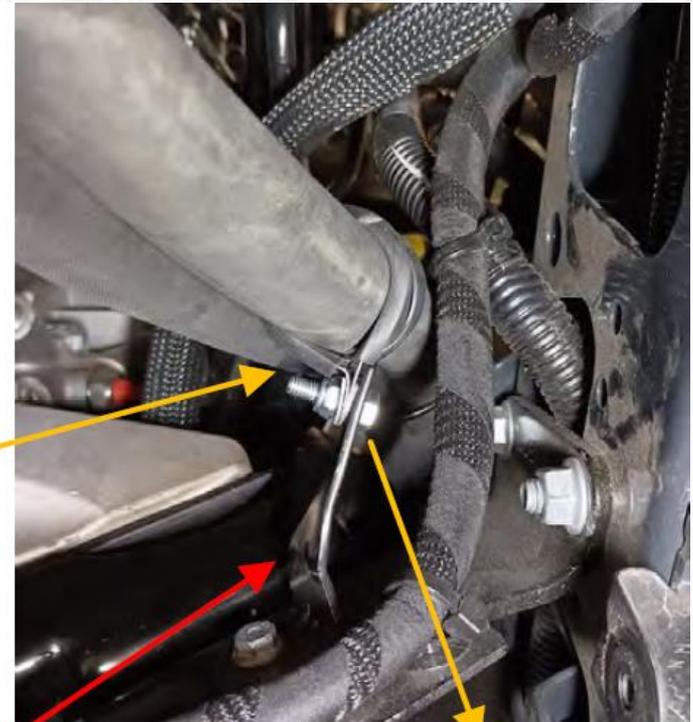

* MANIPULATE
THE DEGREE
DIRECTON OF
THE BRACKET AS
IN THE PICTURE

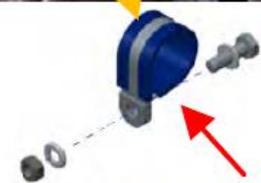

HEXAGONAL BOLT
M6x20 DIN-933
FLAT WASHER Ø6
DIN-125



OLIVA TORRAS
MOUNT & DRIVE KITS


IVECO Daily 3.0 with Quad-Leaf

SB24010065 // New Routing



IVECO Daily 3.0 with Quad-Leaf

SB24010065 // New Routing

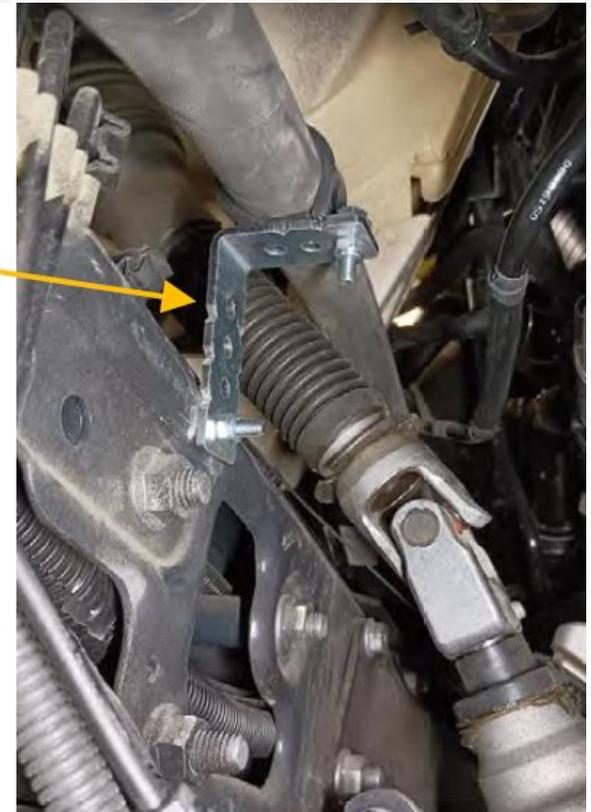

FLAT WASHER Ø6 DIN-125
NUT M6 DIN-934

1149000040

HEXAGONAL BOLT
M6x20 DIN-933

HEXAGONAL BOLT
M6x20 DIN-933
FLAT WASHER Ø6
DIN-125